



Disassembling KDDI Kyocera A5521K SD Card Slot

Written By: Dominic Grisafe



INTRODUCTION

These instructions will demonstrate how to remove the SD card slot from the KDDI Kyocera A5521K.



TOOLS:

- [Tri-point Y0 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn the phone over to expose the battery cover.
- Apply pressure to the back of the battery cover to slide it down.
- The battery cover is now separate from the phone.

Step 2



- Remove the battery by pushing it up and out from the bottom.
- The battery, cover, and phone should now be separated.

Step 3 — Back Plate



- Remove the four screws with the Y0 screwdriver.

Step 4



- Remove the black, rubber screw caps towards the top of the back of the phone to reveal two additional screws.
- Remove the two screws with a Y0 screwdriver.

Step 5



- Rotate the phone 180 degrees.
- Carefully separate the back plate from the remainder of the phone.
- The back plate should now be detached from the rest of the phone.

Step 6 — SD Card Slot



- Rotate the phone approximately 45 degrees to the right.
- Gently pry up the SD card slot with a spudger.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 06:22:09 AM.